13- SERVICE CENTERS

For any further assistance, please contact our nearest branch office or service centre:

Branch	Address	Telephone No.
Ahmedabad	4th Floor, APM Shopping Mall Near IOCL Petrol Pump, Shyamal-Karnavati 100 Ft. Road, Satellite, Ahmedabad-380 015.	Call •**1800-209-5511** (Toll-Free) •**1800-225511** (BSNL/MTNL Landline-Toll Free)
Bangalore	3rd Floor, The Karnataka Film Chamber of Commerce Bldg. 28, 1st Main, Cresent Road, High Grounds Nr. Shivanand Circle, Bangalore-560 001.	
Bhopal	217, Zone I, M.P. Nagar, Beh. Jyoti Talkies, Bhopal-462 011.	
Bhubaneshwar	Highway Complex NH-5, Rudrapur, Bhubaneshwar-752 101.	
Chandigarh / Mohali	Plot No.A-40, Phase-VIII-A, Industrial Area, Mohali-160059.	
Chennai	No.1, Sidco Industrial Estate. Ambattur, Chennai-600 098.	
Coimbatore	585-590, Sathya Towers 3rd floor, D.B. Road R.S. Puram, Coimbatore-641 002.	
Delhi	Godrej Bhavan, 2nd Floor, Shershah Suri Marg, Okhla, New Delhi-110 065.	
Faridabad	Godrej Bhavan, 2nd Floor, Shershah Suri Marg, Okhla, New Delhi-110 065.	
Ghaziabad	Godrej Bhavan, 2nd Floor, Shershah Suri Marg, Okhla, New Delhi-110 065.	
Guwahati	Godrej Building, G.S.Road, Ulubari, Flyover, Guwahati-781 007.	
Hyderabad	201 & 202, Lala-1 Land Mark, 5-4-94 to 97, 2nd Floor, Above Digital Shoppy, Ranigunj, M.G. Road, Secunderabad-500 003.	
Jaipur	502-506, 5th Floor, Gaurav Towers, Malviya Nagar, Jaipur-302 017.	
Kochi	2nd Floor, Angels' Arcade South Kalamassery, Near CUSAT Signal Ernakulam-682022.	
Kolkata	Block GN, Sector V, Salt lake, Kolkata-700 091.	
Lucknow	C 3/3 & C3/4, Sanjay Complex Behind Akashwani Bhawan, Vidhan Sabha Marg Lucknow-226001.	
Mumbai	Appliance Divn., Plant 4, Pirojshanagar, Vikhroli, Mumbai-400079.	
Nagpur	Dr. Bhiwapurkar Chamber 2nd Floor, Opp: Yashwant Stadium Dhantoli, Nagpur- 440012.	
Patna	Jeevan Deep Bldg. Exhibition Road Patna-800 001.	
Pune	Apollo Building Square, Plot No.60, Survey No.599 Sahaney Sujan Park, Lullanagar, Bibewadi Road, Pune-411 040.	
Raipur	9/1, Besides Bharat Petrol Pump Opp: Hotel Picadelly, Mahoba Bazaar, GE Road, Raipur-492001.	
Ranchi	C/o. Surya Motors, Near Krishi Bazaar Samiti Pandra, Ranchi (Jharkhand)-835 222.	

Website: **www.godrejappliances.com** & **www.godrejsmartcare.com**
E-mail: **smartcare@godrej.com**

DIGIFRESHUM0412

Godrej eon

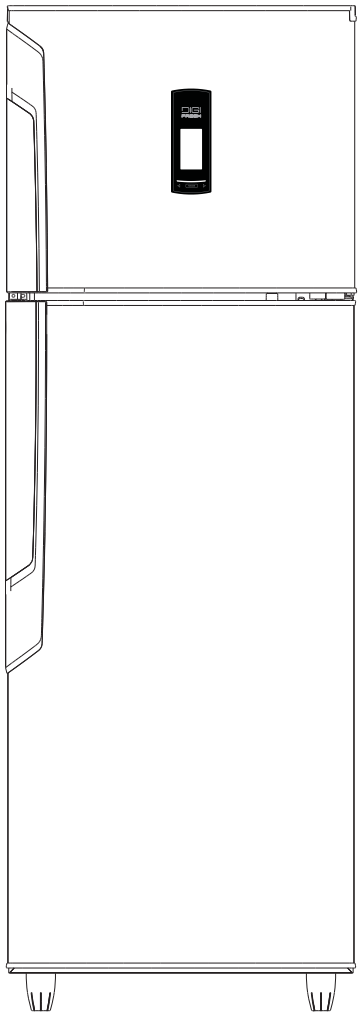

DIGI FRESH

USER GUIDE

FROST FREE REFRIGERATOR

Godrej & Boyce Mfg. Co. Ltd. - Appliance Division

CONTENT

1. PARTS IDENTIFICATION
2. HOW TO INSTALL
3. FIRST STEPS
4. KNOW YOUR REFRIGERATOR
5. FULLY AUTOMATIC DEFROSTING
6. BEFORE CALLING FOR SERVICE
7. USEFUL SUGGESTIONS FOR FOOD STORAGE
8. CLEANING YOUR REFRIGERATOR
9. MOVING OUT/SHIFTING
10. SAFETY PRECAUTIONS
11. ENVIRONMENT FRIENDLY SUGGESTION
12. WARRANTY
13. SERVICE CENTERS

1 - PARTS IDENTIFICATION

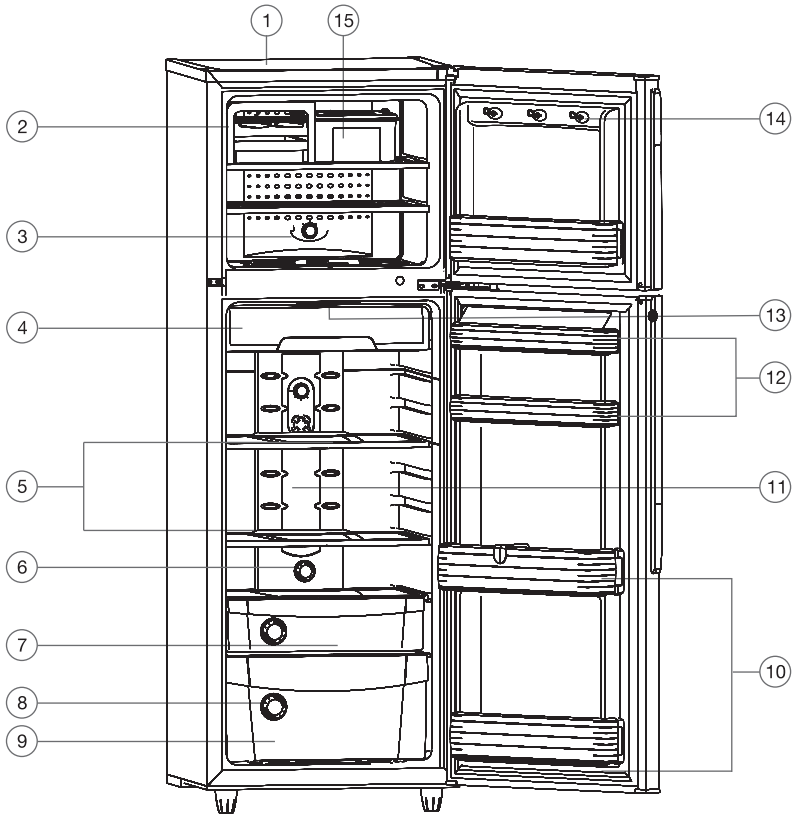

1. Table Top
2. Twist & Serve Ice Tray
3. Cold Air Control
4. Chilled Case
5. Adjustable Toughened Glass Shelves with Silver Shower Technology
6. Crisper Temperatures Control
7. Silver Fresh Fruit Tray*
8. Humidity Control
9. Vegetable Tray
10. Bottle Shelves
11. Nutra Lamp
12. Utility Shelvers
13. Aroma Lock
14. Polybag Suspenders
15. Silver Fresh Freezer Box

*Features may vary by models.

2 - HOW TO INSTALL

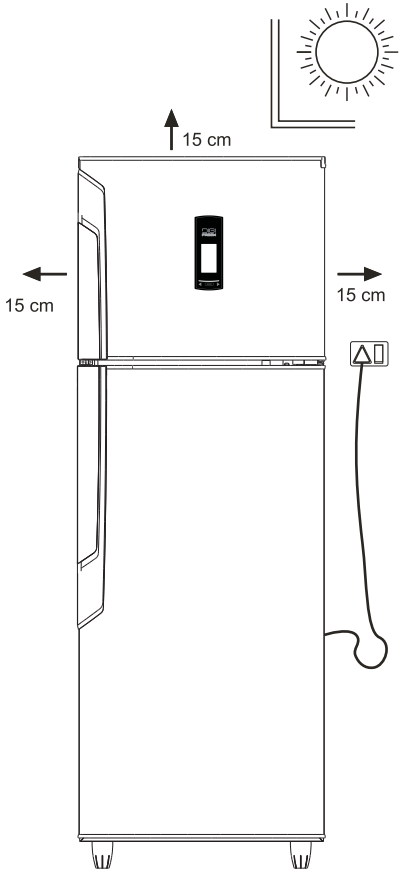

CHOOSE A WELL-VENTILATED PLACE

Provide at least 6 inches (15cm) above, 6 inches (15cm) at both sides and 6 inches (15cm) at the back, to ensure air circulation.

AVOID EXTREME HEAT AND COLD

Place your refrigerator away from direct sunlight and heat sources such as radiators or cooking ranges and also from direct air drafts, i.e. windows, fans etc.

PLACE ON A FIRM, LEVEL FLOOR

Your refrigerator should be made to stand on a firm, level floor. If the floor level requires adjustment suitable packing will have to be used.

Please note that no stand must be used with the refrigerator. It should rest directly on the floor.

USE PROPER VOLTAGE & ELECTRICAL WIRING

Your refrigerator operates on AC 220 V, 50 Hz power supply. A voltage stabiliser is advisable if there is wide fluctuation in supply voltage. Connect the plug to a 3 pin, 5 amps socket.

Ensure that the wall socket is properly earthed by having it checked by a qualified electrician. It is safe to use a socket with a fuse and a switch, at about 1.4 metres from the floor.

KEEP IT CLOSE TO THE POWER OUTLET

Place your refrigerator close to the electrical outlet. Do not use an extension cord. The wires should be kept off the floor, for if water drips onto the floor, a short circuit may be caused.

3 - FIRST STEPS

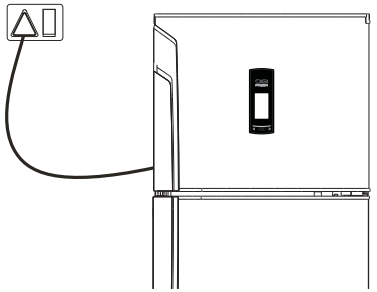

1. Plug the appliance cord into the wall outlet and switch on the power supply. Check that the light bulb glows on opening the lower door of the refrigerator.

2. Set the digital control panel on the door to TURBO CHILL mode and leave the refrigerator on for about 24 hours. (The Mode key can be used to select the TURBO CHILL mode) The refrigerator will operate continuously at the TURBO CHILL setting. You can open the freezer door and feel the cold air flowing.

3. Set the temperature control to level 4 after running in TURBO CHILL mode for about 24 hours. (You can use the Mode key to select Cooling Level and the arrow keys to select the temperature level)

4. You can adjust the temperature levels in the digital control panel according to the desired level of cooling.

5. If your refrigerator is switched off for more than 8 hours, repeat steps 1 to 4 before using your refrigerator.

4 - KNOW YOUR REFRIGERATOR

A. FREEZER (UPPER) COMPARTMENT

Is used to make ice and store ice and store ice cream and other frozen desserts. Also used to store meats, poultry, fish, fruit pulp and other frozen foods for extended periods of 8-12 weeks.

TWIST & SERVE ICE TRAYS AND ICE SERVER

- A separate ice tray section is provided with two ice trays and an ice server.
- The twist & serve design allows you to collect the ice formed in the trays in the ice server below by just twisting the trays.
- The ice server can be used for storing ice cubes while the ice trays become available for making more cubes. However please do not use it for making ice. Ice expands with cooling, so it may lead to cracking of the ice server.

FREEZER DOOR SHELF

The freezer also has a shelf in the door section to accommodate small items that need to be frozen.

POLYBAG SUSPENDERS

Have been provided to hang poly-bags of frozen food like peas, fruit pulp, meat etc. Any packet of weight not more than 500gms can be hung.

SILVER FRESH FREEZER BOX*

A special freezer box enriched with Silver icons which come with anti-bacterial properties, ensures that the food stored retains its nutrients and taste for long time.

B. REFRIGERATOR (LOWER) COMPARTMENT

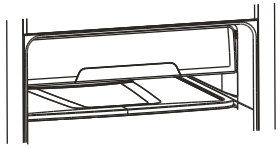

CHILLER

- In this special chamber, food is stored at close to 0°C, which keeps items like paneer, cheese, cold cuts and fish etc. soft.
- It eliminates the need for thawing the food before cooking. Food stored in the freezer can also be kept overnight for gradual thawing.

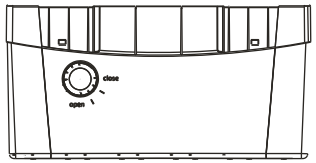

VEGETABLE TRAY

- The refrigerator comes with a large vegetable tray with a recessed handle for ease of use. The vegetable tray also comes with a humidity control knob that allows you to regulate the inflow of air, keeping vegetables fresh for a longer time.

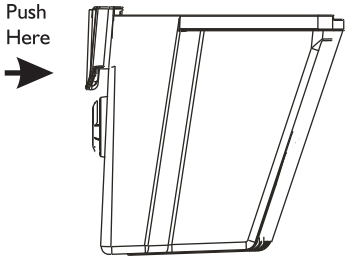

- Use the handle to pull the tray. It is very convenient and the tray will slide out easily. For relocating the tray it is better to give a gentle push to the tray in the centre. Do not use the handle for sliding in. Centre push is easier and will ensure proper relocating of tray (Refer to sketch).

SILVER FRESH FRUIT TRAY*

A special fruit tray enriched with Silver ions which come with anti-bacterial properties, ensures that the food stored retains its nutrients and taste.



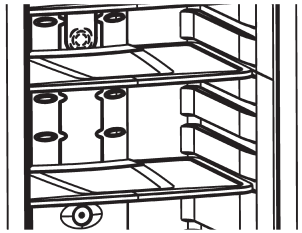

ADJUSTABLE STORAGE SHELVES

The refrigerator has multiple grooves - so you can adjust the position of shelves to suit your needs. They should be pushed to the back.

SILVER SHOWER TECHNOLOGY

Cold air flowing from the shelves gets evenly distributed by means of in-built air vents in the shelves. The vents have been enhanced with Silver ions to provide extra germ fighting ability.

*Select models.

NUTRA LAMP

It is a special bulb located in the light panel at the back of the refrigerator cabinet. The lamp uses the advantages of far infra red rays to keep food nutritious and healthy.

LIGHT BULB

The light bulb located at the back of the refrigerator ensures proper illumination in the refrigerator and the recessed lamp design also provides for more usable space in the front for food storage.

AROMA LOCK

Special palladium based deodorizer removes foul odours and destroys ethylene gas released by some ripening fruits and vegetables. This helps to slow down the decay of the stored food and ensures freshness for a longer time.

AIR FLOW CONSOLE

The Air Flow Console ensures intelligent circulation of cool air throughout the refrigerator. This gives all the food uniform cooling where ever it is stored in the refrigerator (on all the shelves). As a result, food stays fresher for a longer time.

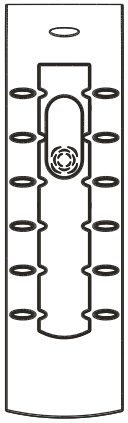

C. DOOR PANEL

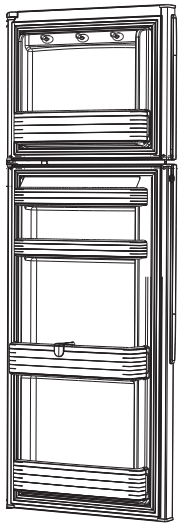

The thoughtfully designed door panel gives you versatility of storage and provides full utilization of precious space. It offers you:

- Removable egg tray.
- Utility shelves for storing butter, cheese, chocolates and medicines.
- One extra deep bottle rack which can accommodate big 2.5L bottles. Bottle Snugger to hold the bottles in place and prevent them from shifting. Do not store bottles in the freezer compartment.

D. DIGITAL CONTROLS

The digital control panel provides the following features/functions-

MODE KEY:

Mode key

Using this key it is possible to select between 5 different operations: Cool Level, Turbo Chill, Child lock, Cool Timer and Holiday Mode. On the press of 'Mode' Key, the list will appear on the screen. Use the same key to scroll down the list. Press the right key to select a particular mode and confirm setting by pressing mode again.

COOL LEVEL:

Identification Selection

In this mode you can select between 7 different preset cooling levels (which appear in the form of a bar graph from 1 to 7) using Right and Left Arrow keys. The LCD screen will display “MIN” for 1st and 2nd levels, “NORMAL” for levels 3, 4 and 5, “MAX” for levels 6 and 7. The default cooling level is level 4 - NORMAL. After selecting the required level, confirm setting by pressing the mode key.

The cooling level should be set based on the amount of food stored as well as the climatic conditions. Refer recommended setting chart given later.

TURBO CHILL:

Identification Selection Display

This mode can be selected when you require fast cooling in the refrigerator. Press mode key twice to reach Turbo Chill. Press right key to choose Y (Yes) [or left key to choose N (No)] and confirm setting by pressing mode key again. On selection of this mode, the LCD screen will show the icon for the same, as displayed here.

CHILD LOCK:

Identification Selection Display

Keys can be locked through the Child Lock function in menu selection. Press mode key thrice to reach Child Lock. Press right key to select Y (Yes) [or left key to select N (No)]. Confirm setting by pressing mode key again. In order to unlock, the right arrow key is to be pressed for 5 seconds continuously. Child lock icon on LCD display will show the status of key lock. If Child Lock is enabled and door open alarm sounds, the left arrow key will get activated and can be used as mute key.

COOL TIMER:

Identification Selection Display

This feature can be put to use if you need to store certain food articles (eg. jellies) for a specific period before consumption and would like a reminder to take it out. Press mode key four times to reach Cool Timer. Press right key. The LCD will display “00 MIN”. Use right key to increase count down time or left key to decrease. After entering the desired value press mode key to reconfirm settings.

Note the alarm can be set to maximum of “99 MIN”. A clock will be on display during the countdown operation. Also, the time remaining for completion will be displayed. A warning beep will be sounded once the timer completes the set time. Press left key to stop the beep.

HOLIDAY MODE:

Identification Selection Display

This mode can be used when the family is going out for 2-3 days. Press mode key 5 times to reach holiday mode. Press right key to select Y (Yes) [left key can be used to select N (No)]. And confirm setting by pressing mode key again.

If the vacation is beyond a week, it is recommended to switch off the refrigerator after removing all food and cleaning it. On selection of the Holiday mode, the related icon will be displayed on the LCD- as shown here.

COMPRESSOR ON INDICATION

When the compressor is ON during the normal operation of the refrigerator (or in Turbo Chill setting), the LCD displays COOL SHOWER with dynamic graphic arrows moving downword.

DOOR OPEN ALARM AND INDICATION

If the refrigerator door remains open for more than 1.5 min, the controller will sound a door open alarm (beep). It will stop beeping if Left arrow key is pressed or door is closed again.

ALARM MUTE

During door open alarm condition, if Left arrow key is pressed, then it will stop beeping, also alarm time will get reset to 5 min. Once door is closed, it will get reset to 1.5 min.

E. COLD AIR CONTROL - FREEZER COMPARTMENT

It controls the quantity of cold air flow to the refrigerator compartment.

The settings available to you are Ref. Max, Normal & Freezer Max.

When set at Freezer Max, the freezer compartment is at its coldest setting, but less cold air flows into the refrigerator compartment.

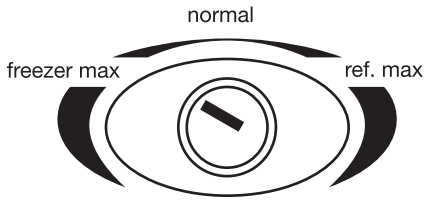

Cold Air Control

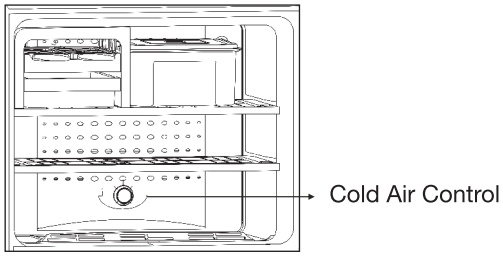

INITIAL SETTING

After running the refrigerator on "TURBO CHILL" as explained in the installation section, set the TEMPERATURE CONTROL (Cooling Level) at level 4 and COLD AIR CONTROL at normal. Allow the refrigerator to operate for 24 hours (one day) to stabilise. Most users would find this combination of settings adequate for their normal use and requirement. For specific requirements, please refer to the table 'For Settings'.

REMEMBER

Whenever the refrigerator is switched off for more than 24 hours, follow the instructions given under INITIAL SETTING (First Steps) before restarting.

The cool level and cold air settings should be selected on the basis of:

1. Total load in refrigerator and freezer compartments.
2. Temperature of the surroundings (ambient temperature).
3. Frequency of door openings.
4. Distribution of load between the two compartments.

SETTINGS FOR YOUR REFRIGERATOR

Ref. Max, Normal, Freezer Max are the settings for the freezer compartment.

1, 2 .....7 are the settings in the digital panel for the refrigerator compartment.

More load in refrigerator compartment	Ref Max. & 1	Ref Max. & 4	Ref Max. & 7
Equal load in both compartments	Normal & 1	Normal & 4	Normal & 7
More load in freezer compartment	Freezer Max. & 1	Freezer Max. & 4	Freezer Max. & 7
TOTAL LOAD	LOW	MEDIUM	HIGH

WINTER
FEW DOOR
OPENINGS

SUMMER
FREQUENT DOOR
OPENINGS

FOR EXAMPLE

1. If you want to quickly freeze items (e.g. making ice cubes or preparing ice creams), you may use setting Freezer Max. & 7.
2. If you want to cool items in refrigerator compartment (e.g. custards or jelly) you may use setting Ref. Max. & 7. Whenever you change the setting for such special requirements, you may revert to the normal setting once your requirements are satisfied. When ambient temperature increases (e.g. during summer months) you may move the temperature control towards colder setting and cold air control towards Ref. Max.
3. You should bring the setting back to normal after such period.

5 - FULLY AUTOMATIC DEFROSTING

You never have to defrost either compartment since your refrigerator is designed to defrost itself completely and automatically.

The cyclic defrost system ensures that the refrigerator defrosts itself daily, by a "defrost heater" during the "defrost cycle". During this cycle, the compressor is off for sometime, after which it restarts.

Defrost water drains into the water evaporation pan which sits near the compressor, through the drain pipe. From there, it evaporates automatically. Overflow, if any, will collect in the overflow tray.

OVERFLOW OF WATER FROM EVAPORATION PAN

Clean the water evaporation area periodically. To drain the water completely, unplug to drain, rinse and flush with fresh water if required, and then replug. Ensure re-plugging or else defrost water will leak on to the floor.

6 - BEFORE CALLING FOR SERVICE

If your refrigerator is not working properly, check the following before you call for service assistance.

1.Power plug is connected properly.

2.Fuse is intact and power supply is normal.

3.Temperature control is set correctly.

To replace illuminating lamp: switch off the appliance. Remove plug from the socket. Remove bulb cover by gently pulling out. Turn the lamp anti-clockwise to remove. Replace with new lamp, fit back the bulb cover.

Note: The refrigerator has been designed for efficient heat dissipation. The side and back of the refrigerator may become warm when it is in use. This is normal.

On opening the door, you may find water droplets on the inner surface. This is normal condensation process and not a defect.

7 - USEFUL SUGGESTIONS FOR FOOD STORAGE

- It is important that all food should be fresh before freezing or refrigeration, as food can be preserved, not rejuvenated.
- If frozen foods are bought and stored in the freezer after thawing, they are not safe for freezing.
- It is better to freeze meats in bigger pieces. So mincing the meat in advance should be avoided.
- All frozen food should be either packed in containers or wrapped in polyethylene or aluminum foil.
- Bread, cake and pastries should be kept properly wrapped or in containers.
- Butter, margarine and other fats can be stored in their original wrappings and in covered containers if in use.
- Loosely wrap all vegetables, especially the leafy ones in polythene bags.
- Fruit and vegetables that have a strong odour should be wrapped tightly.
- Certain vegetables like fresh beans and lady finger should not be washed before storing.
- Mushrooms, melons and peaches can only be chilled in the refrigerator and not preserved.
- If fruits and vegetables are washed before storing, they should be thoroughly drained of all the water. Excess moisture can increase the possibility of spoilage or decay.
- Avoid keeping vegetables right in front of the air-vent of the cold air flow console as it may lead to spoilage.
- Hot food should not be stored in the refrigerator, it should be cooled to room temperatures. Hot food increases the temperature inside the refrigerator and causes unnecessary condensation which can spoil other food.
- Ginger, garlic and red chilly paste can be made and stored in the freezer for 15-20 days. Chutneys can be kept in the freezer for 3-4 days.
- Ice cream should always be stored in the freezer. The cold air control must be kept at the coldest setting (freezer max) for storing ice cream. Ice cream may still stay slightly soft. This is bound to happen as normally ice cream is stored by retailers in deep freezers which maintain much lower temperatures.
- Bottles containing water and other liquids should be kept tightly closed at the caps. Wipe off all moisture before storing.
- Unopened canned food need not be stored in the refrigerator.

8 - CLEANING YOUR REFRIGERATOR

Complete defrosting and cleaning once a month is advisable. To do this, switch off the refrigerator and disconnect the plug from the wall socket.

- Empty the refrigerator by removing all food, ice trays, shelves and vegetable tray.
- Then take a piece of clean cloth, dip into a mild soap solution and wipe the refrigerator gently.
- Water should not get into the light bulb holding box and other electrical components. Always ensure that the refrigerator is dry before you restart it.
- To clean the exteriors, wipe with a cloth moistened with warm soapy water. Wipe dry.
- Keep the surroundings clean and insect free. Do not spray any insecticides inside the refrigerator as it is harmful and toxic, also the chemicals react with the plastic surfaces and damage them.
- It is important to keep the exteriors of the refrigerator dry to avoid rusting, especially the lower front edge of the cabinet as well as the bottom surfaces of the door.

9 - MOVING OUT/SHIFTING

GOING ON VACATION

If you are away for less than a week, there is no need to switch off the refrigerator. You can set it on 'Holiday Mode'. If you are taking a long break, switch off the power supply, remove the plug and remove all the food stuff. Defrost and clean the refrigerator. Leave the door slightly open to prevent smell. It is advisable to place a thick towel over the door so that it does not shut.

MOVING HOUSE

If you are moving house, it is essential that a Godrej service representative or an authorised dealer inspects the refrigerator at the time of re-installation at the new address. This is essential for the continuation of the warranty of the product/optional service contract for the sealed system of the refrigerator.

We would also recommend that the product be insured against damage in transit. The warranty on the product/service contract continues to be effective only if the product is found to be in working condition at the time of re-installation by the representative of Godrej or its authorised dealer at the destination town.

10 - SAFETY PRECAUTIONS

WARNING:

When using this refrigerator, always exercise basic safety precautions, including the following:

- Locate, install and use the refrigerator properly in accordance with the instructions given in this user guide.
- Never unplug your refrigerator by pulling the power cord. Always grip the plug firmly and pull straight out from the wall socket after switching off the supply.
- Repair or replace immediately all electric service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or damage by abrasion, rodents etc.
- Do not keep anything on top of the refrigerator – such as lit candles, temples, cloth covers, electrical appliances like TV/ Lamp etc.
- Do not splash water on or in the vicinity of the refrigerator. It could cause an electrical leak or malfunction.
- The ventilation grilles should not be obstructed. Always ensure that there is good ventilation and that the outward flowing air is able to escape.
- Young children should be supervised to ensure they do not play with the appliance. They could damage the refrigerator or hurt themselves. It could also disturb the stability of the refrigerator.
- After your refrigerator is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces and get hurt.
- Don’t refreeze frozen foods which have thawed - completely or partially. Eating such refrozen foods could harm your health.
- Unplug your refrigerator before cleaning and making repairs. We strongly recommend that any servicing be performed by a qualified technician.
- Do not store flammable sprays, vapour or liquids like gasoline, laquer and paint, volatile chemicals like benzene or ether, evaporating liquids like perfumes, nailpolish removers etc inside the refrigerator. It may damage the food and some of these could also cause an explosion. Avoid storing these near the refrigerator as well.
- Do not use lubricants (lubricating oils, sprays, kerosene, WD-40 etc) on the hinges of the refrigerator doors. Some lubricants chemically react with plastics resulting in damage to doors.
- Refrigerator contains refrigerant and insulation contains gases, which must be disposed off professionally, to avoid any safety hazards.

11 - ENVIRONMENT FRIENDLY SUGGESTION

DISPOSAL OF PACKING MATERIAL

After installing the refrigerator, recycle/reuse the corrugated box, fitments and polythene cover/straps. Do not dispose them off as garbage. This helps to conserve natural resources and prevents pollution.

ENERGY CONSERVATION TIPS FOR REFRIGERATOR USE

You can help save limited natural resources i.e. oil and coal by saving electricity. Simply follow these guidelines.

1. Never place hot food inside the refrigerator. Allow it to first cool to the natural ambient temperature. Hot food kept in the refrigerator increases the inner temperature thereby consuming more electricity. It also causes unnecessary condensation which can spoil other food.
2. Avoid door openings that are unnecessary or for long durations (say more than 30 seconds) as the air inside the refrigerator gets warm. This requires extra running time for the refrigerator resulting in more electricity consumption.
3. Ensure that the refrigerator door is closed properly.
4. During installation of the refrigerator, ensure that the minimum clearance between the refrigerator and the walls are maintained as per the 'Installation Instruction' given in this User Guide. This is required for efficient functioning of the condenser and in turn the refrigerator.
5. Avoid exposing the refrigerator to extreme heat by placing it away from direct sunlight and heat sources such as radiators or cooking ranges etc. as this adds extra load on the refrigerator and leads to an increase in power consumption.
6. If you are going away for long periods (say more than a week) on a vacation etc., switch the refrigerator off so that there is no wastage of power. When the refrigerator is switched off, clean the refrigerator as recommended.
7. Set the temperature control and the cold air control judiciously for optimum performance as well as minimum power consumption. When the temperature control knob in the refrigerator section is set on 1 and the cold air control in the freezer is set on Ref. Max., the power consumption is the least. At the peak setting, when the temperature control is on 7 and the cold air control setting is on Freezer Max., the power consumption is the highest.

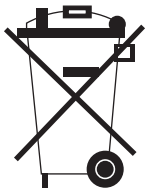

Protection of Environment:

"Protection of environment" is one of the core values of Godrej and we seek your co-operation to make sure that this product is not disposed as unsorted municipal waste.

This symbol is known as the "Crossed-out Wheelie Bin Symbol". It means that the product should not be disposed of with your general house-hold waste. It should be disposed of only through the company's collection centers with special treatment so as to prevent any damage to the environment. Please call: **1800 209 5511** or visit **www.godrejappliances.com/green-think** for details about Godrej Appliances authorized collection centers.

12 - WARRANTY

The Godrej refrigerator comes with a FIVE years warranty on COMPRESSOR and a ONE year warranty on all other parts (Except bulb, glass and add-on plastic parts) from the date of purchase, against defective material or workmanship. In case of any such defect found during the first year from date of purchase, Godrej & Boyce Mfg. Co. Ltd. - Appliance Division will undertake repairs to the warranted part free of charge, subject to the terms and conditions below. In the warranty period beyond the first year from date of purchase, only the the compressor will be provided free of cost. However, the appliance will be repaired on payment of necessary charges.

INSTRUCTIONS FOR THE CUSTOMER

1. Kindly ensure that the dealer fills the warranty card correctly and completely.
2. You should retain the warranty card for record and produce the same in the event of any warranty repairs.
3. In the event of a defect developing in the product, contact the nearest authorized Godrej & Boyce Service Center for obtaining warranty service and provide the defect, model details & serial no.
4. Earthing of the appliance is necessary to ensure safety.
5. Product will function between +/-5% of the rated voltage. For any fluctuation beyond the specified limit, company shall not be responsible and the warranty stands terminated.
6. Frequency must be between 5% variation of 50 Hz. Beyond this, the company shall not be liable for any unforeseen hazards like fire, shock etc. and in turn, the warranty stands terminated.
7. The product must be maintained to ensure hygiene. If there are any insects, rodents etc in it, obstructing the functioning of the product, the company shall not be responsible and in turn, the warranty stands terminated.
8. If you are moving house, it is essential that a Godrej service representative inspects the refrigerator at the time of re-installation at the new address. The warranty on the product / optional service contract for the sealed system of the refrigerator continues to be effective only if the product is found to be in working condition. The re-inspection will be done on the payment of necessary charges. We would also recommend that the product be insured against damage in transit.

TERMS AND CONDITIONS

1. Repairs and replacements of parts will be carried out through the authorized Customer Service Center.
2. All transportation and handling expenses incurred while repairing will be payable by the customer.
3. For any appliance installed beyond the municipal limits of the jurisdiction of the authorized customer service centre, charges towards technician's visit will be borne by the customer.
4. While the company will make every effort to carry out the repairs at the earliest, it however is made expressly clear that the company is under no obligation to do so in a specified period of time.
5. The company / its authorized personnel will collect any parts, compressor or other components replaced.
6. Warranty does not cover accessories to the appliance.
7. Sealed system gas charging and consumables will be charged for any such repairs after one year from the date of purchase.
8. While the company will take all necessary steps to repair the appliances supplied under the warranty and keep sufficient stock of the spare parts of the Appliance with them, however, in certain cases where the appliance can not be repaired due to non availability of the spare parts, the company, at its sole discretion, may offer a replacement of the appliance to the purchaser of such an appliance, under a replacement offer. The replacement offer is subject to change from year to year and any discount given shall be applicable on the MRP of the product to be purchased as a replacement. A table giving the details of the replacement offer is available on www.godrejsmartcare.com.

Godrej & Boyce Mfg. Co. Ltd.- Appliance Division

CUSTOMER COPY

MODEL NO.

UNIT SR. NO.

DATE OF PURCHASE

CUSTOMER'S NAME & ADDRESS	DEALER'S NAME & ADDRESS
_____	_____
_____	_____
_____	_____
TEL. _____	TEL. _____

Customer's Signature:

This warranty is valid only if it is filled in and stamped by our authorised dealer on the date of purchase.
Overall warranty stands null and void if

1.The warranty card is not completed properly at the time of the purchase. 2.The completed warranty card is not presented to the authorized personnel at the time of service of the product. 3.The refrigerator is not operated according to instructions given in the User's Guide. 4.Defects are caused by improper use, which shall be determined by the company personnel. 5.Unauthorized persons carry out any repair work. 6.Defects are caused by reasons beyond control, like abnormal voltage, acts of God, or while in transit to service center or purchaser's residence. 7.The serial number is deleted, defaced or altered. 8.Damage is caused to the refrigerator or any parts due to transportation or shifting.

Warranty automatically expires after the stipulated period from the original date of purchase, even if the refrigerator was not in use for any time for whatever reasons.